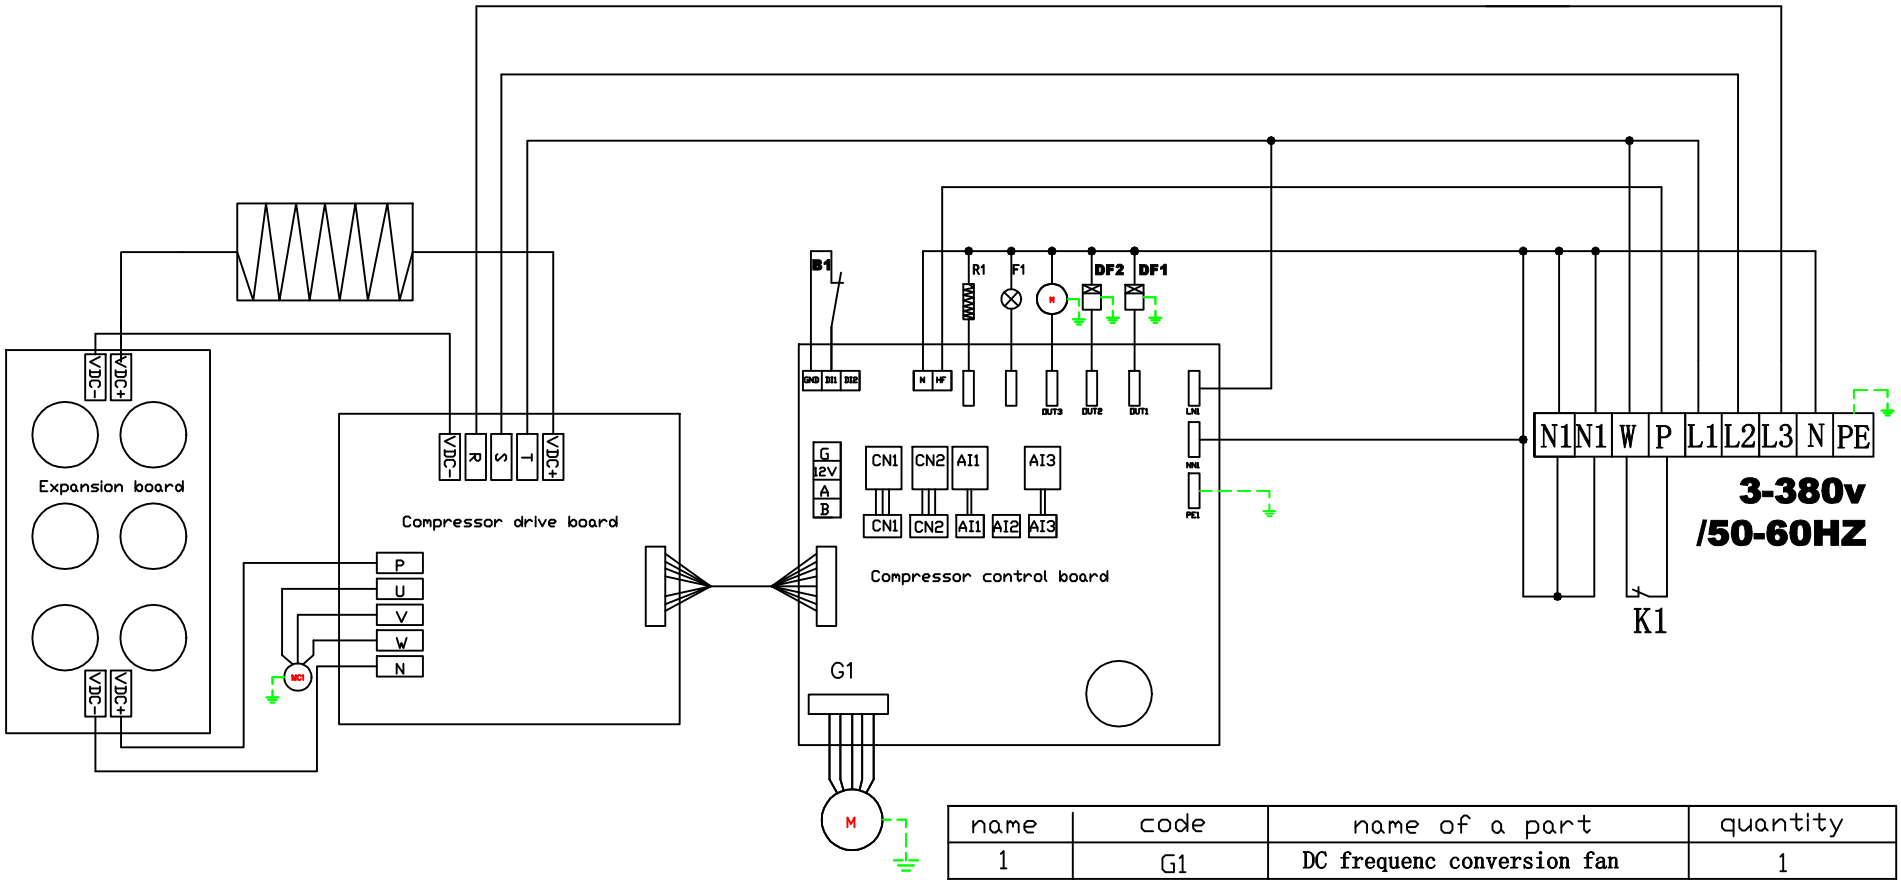

name	code	name of a part	quantity
1	G1	DC frequenc conversion fan	1
2	MC1	DC variable frequency compressor	1
3	M1	Cooling fan	1
4	B1	Temperature protection	1
5	R1	Crankcase heating	1
6	F1	Fault indication	1
7	DF1	Spray solenoid valve	1
8	DF2	Bypass solenoid valve	1
9	CN1	Low pressure transmitter	1
10	CN2	High pressure transmitter	1
11	AI1	Exhaust temperature	1
12	AI2	Ambient temperature	1
13	K1	temperature control switch	1