



- Electronic controller for normal and high temperature static refrigeration units
- 115/230 Vac switching power supply
- NTC (-50 to +90°C) and PTC (-50 to +150°C) probe management
- Simple and intuitive installation and configuration
- 4 pre-loaded configurations for the most common refrigeration applications

**READ ME NOW!!!**


With reference to the label on the rear of the instrument and the application in question:

1. Check that power supply, probes and loads (compressor, heaters, etc.) are suitable for the instrument.
2. Fasten the instrument to the panel as shown in the following figure.
3. Make all the required electrical connections.
4. Power up the unit.
5. After around 2 seconds, if the instrument displays the temperature read by the probes connected to the device, go directly to point 7. If nothing is displayed or an alarm is signalled (alarm codes on the display), power down, check the connections and the power supply and go to point 6.
6. Power the unit up again. If the instrument now correctly displays the temperature, go to point 7. If, on the other hand, the problem described in point 5 is repeated, see the table "Alarms and signals: display, buzzer and relay" to identify the cause of the problem.
7. ir33+ smart is now ready to be configured. For correct configuration based on the required application, see the section "How to select and load a configuration".




**IMPORTANT:** separate the probe and digital input cables from the cables to inductive loads and power cables to avoid electromagnetic disturbance. Never run power cables (including electrical panel cables) and signal cables in the same conduits.

**Dimensions (mm)**

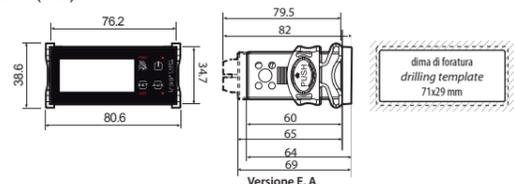


**ir33+ panel installation**

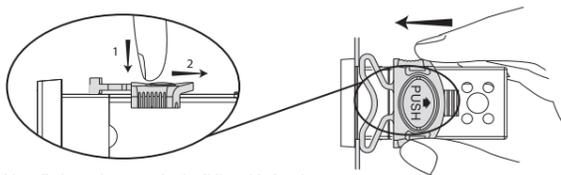


Panel installation using two plastic sliding side brackets

**IREVS7HN0E wiring diagram**

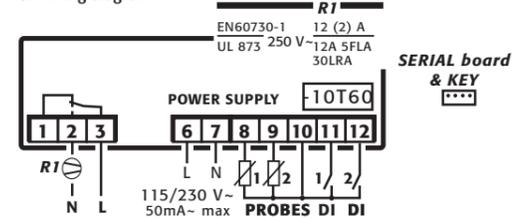

**Optional connections**

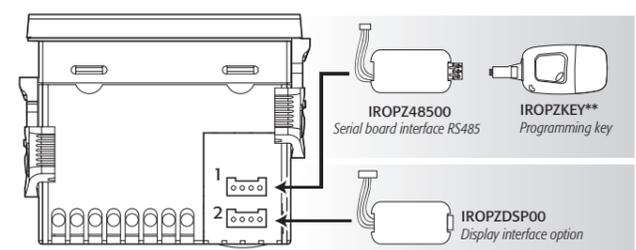

**How to select and load a user configuration**

Step	Action	Effect	Meaning
1	Switch the instrument on while holding <b>PRG</b>	After 2 seconds 'bn0' will be shown	'bn0' is the current configuration. (Carel standard when first starting or other user configuration if loaded)
2	Press the button <b>UP</b> or <b>AUX</b>	The display will show 'bn1', 'bn2', 'bn3', 'bn4'	Select the required configuration (see the previous table)
3	Press on the button <b>DEF</b>	The display will show "Std" for 1 sec	The user configuration selected in point 2 will be loaded

**This procedure can only be performed once:** the most suitable configuration for the application, once loaded, will remain active the next time the instrument is started. When switching on the first time, bn0 corresponds to the Carel standard (default configuration). The procedure for loading one of the user configurations involves copying one of the sets of parameters (bn1,...,bn6) to bn0. bn0 therefore always corresponds to the last configuration loaded.

**Configurations**


ir33+ SMART is loaded with 4 default configurations (sets of parameters). Each configuration identifies a specific refrigeration application, and can be identified simply by the index (bn\*) when switching the instrument on.

Index	Application	Op. T range	Inputs	Relay outputs
bn1	Normal temperature static refrigeration units (no defrost)	2T10 °C	Room NTC	Compressor
bn2	Normal temperature static refrigeration units with defrost (timed) by stopping the compressor	2T10 °C	Room NTC	Compressor
bn3	High temperature thermostat	20T150°C	Room PTC	Heater / Alarm
bn4	Standard CAREL (default configuration)	-50T90 °C	Configurable	Configurable


**bn1: normal temperature (2T10 °C) static refrigeration units (without defrost)**

Temperature range: 2T10°C

**Temperature control**

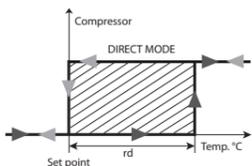

**Connection diagram**

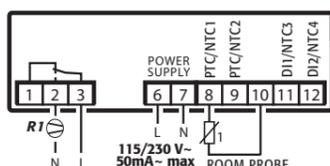


Inputs	Room probe	NTC 1		
Outputs	Compressor	RT: 16 A relay		
Main parameters (type F)	Name	Type	Description	Default value
	St	Ctl	Set point	4 °C
	rd	Ctl	Control differential (hysteresis)	2 °C
	AL (*)	ALM	Minimum temperature alarm	-30 °C
	AH (*)	ALM	Maximum temperature alarm	30 °C
	Ad		Temperature alarm delay	30 min

(\*) absolute alarm thresholds


**bn2: normal temperature (2T10 °C) static refrigeration units with defrost (timed by stopping the compressor)**

Temperature range: 2T10°C

**Temperature control**

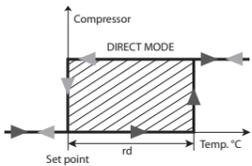

**Connection diagram**

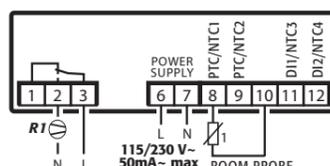


Inputs	Room probe	NTC 1		
Outputs	Compressor	RT: 16 A relay		
Main parameters (type F)	Name	Type	Description	Default value
	St	Ctl	Set point	2 °C
	rd	Ctl	Control differential (hysteresis)	2 °C
	di	dEF	Interval between defrosts	8 hours
	dP1	dEF	Max evaporator defrost duration	30 min
	AL (*)	ALM	Minimum temperature alarm	-30 °C
	AH (*)	ALM	Maximum temperature alarm	30 °C
	Ad		Temperature alarm delay	30 min

(\*) alarm thresholds relative to set point


**bn3: High temperature thermostat (20T150 °C) - (reverse mode)**

Temperature range: 20T150°C

**Temperature control**

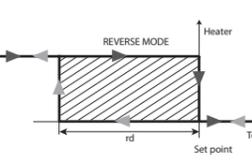

**Connection diagram**

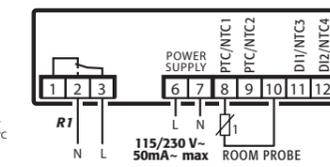


Inputs	Room probe	PTC 1		
Outputs	Heater/Alarm	RT: 16 A relay		
Main parameters (type F)	Name	Type	Description	Default value
	St	Ctl	Set point	40 °C
	rd	Ctl	Control differential (hysteresis)	2 °C
	AL (*)	ALM	Minimum temperature alarm	0 °C
	AH (*)	ALM	Maximum temperature alarm	150 °C
	Ad		Temperature alarm delay	30 min

(\*) absolute alarm thresholds

**bn4: standard CAREL (default configuration)**

**Connection diagram**

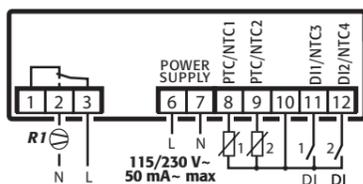

Name	Type	Description	Default value
St	Ctl	Set point	0 °C
rd	Ctl	Control differential (hysteresis)	2 °C
rt	Ctl	Temperature monitoring interval	-
rH		Maximum temperature read	-
rL		Minimum temperature read	-
di	dEF	Interval between defrosts	8 hours
dt1	dEF	Evaporator end defrost temperature	4 °C
dt2	dEF	Aux evaporator end defrost temp.	4 °C
dP1	dEF	Maximum evaporator defrost duration	30 min
dP2	dEF	Maximum aux evaporator defrost duration	30 min
dd	dEF	Dripping time	2 min
d8	dEF	Alarm bypass time after defrost and/or door open	1 hours
d/1		Defrost probe 1 reading	-
d/2		Defrost probe 2 reading	-
AL	ALM	Minimum temperature alarm	0 °C
AH	ALM	Maximum temperature alarm	0 °C
Ad		Temperature alarm delay	120 min

**Indications on the display**

When flashing, the signals on the display indicate a request that cannot be implemented until the delay timers have expired.

Icon	Function	Normal operation		Flashing
		ON	OFF	
	COMPRESS.	compressor on	compress. off	compress. call
	DEFROST	defrost in progress	no defrost call	defrost call
	ALARM	delayed external alarm (before the time "A7" has elapsed)	no alarm present	alarms in norm. operation (e.g. high/low temp.) or immediate or delayed external alarm from digital input
	SERVICE		no malfunction	malfunction (e.g. EEPROM error or faulty probes)
	CONT. CYCLE	function activated	function not activated	function called

**Buttons on the keypad**

Button	Fonctionnement normal	Start-up	Autom. address request
<b>PRG/MUTE</b> 	- if pressed for more than 3 s, accesses the menu for setting the type F parameters (frequent) or C (configuration) - if there is an active alarm: mutes the audible alarm (buzzer) and deactivates the alarm relay	PRG+ON-OFF/UP: if pressed and held for more than 5 s at start-up, activates the procedure for setting the default parameters	Automatic address assignment: if pressed for more than 1 s, starts the automatic serial address assignment procedure
<b>ON-OFF/UP</b> 	- if pressed for more than 3 s, deactivate the control / if pressed for more than 1 s, active the control - during parameter modification increases the displayed value or moves to the next parameter	ON-OFF/UP+AUX/DOWN: if pressed together for more than 3s, activates/deactivates the continuous cycle ON-OFF/UP+ SET/DEF: if pressed together for more than 3s, display the temperature read by the probe defrost 1 ON-OFF/UP+ PRG/MUTE: if pressed for more than 3s, resets any alarms with manual reset	
<b>AUX/DOWN</b> 	- if pressed for more than 1 s, activates/deactivates the auxiliary output - during parameter modification procedure, decrease the displayed value or moves the previous parameter	AUX/DOWN + ON-OFF/UP: if pressed together for more than 3s, activates/deactivates the continuous cycle AUX/DOWN + SET/DEF: if pressed for more than 1s, displays a submenu with the HACCP alarm parameters (HA, HAN, HF, HFN)	
<b>SET/DEF</b> 	if pressed for more than 1 s, displays and/or sets the set point if pressed for more than 5 s, activates a manual defrost	SET/DEF+ AUX/DOWN: if pressed for more than 1s, displays a submenu with the HACCP alarm parameters (HA, HAN, HF, HFN) SET/DEF+ ON-OFF/UP: if pressed together for more than 3s, display the temperature read by the probe defrost 1	

**How to set the set point**

Step	Action	Effect	Meaning
1	Press <b>DEF</b> for 2 seconds	After 1 seconds the display shows the current set point	This is the currently active control set point
2	Press <b>UP</b> or <b>AUX</b>	The value on the display will increase or decrease	Set the desired value
3	Press <b>DEF</b>	The controller will display the temperature read by the probes again	The set point is modified and saved

Another way of changing the set point is to set parameter "St" (see the tables below)

**How to access and set:**

type "F" parameters (FREQUENT, not protected by password)  
type "C" parameters (CONFIGURATION, protected by password)

Step	Action	Effect	Meaning
1	Press <b>PRG</b> for 3 seconds	After 3 seconds the display will show the first parameter, "0" (password)	Access to type "F" parameters is direct
2	Press <b>UP</b> or <b>AUX</b>	The value on the display will increase or decrease	Enter the password "22" to access "C" parameters, or to access "F" parameters
3	Press <b>DEF</b>	The display will show "St" (Setpoint)	This is the current value of the parameter
4	Press <b>UP</b> or <b>AUX</b>	The display will scroll the list of type "C" parameters (CONFIGURATION) to set the value of password = 22 otherwise type "F"	Set the desired value
5	Press SET	The display will show the value of the selected parameter	This is the current value of the parameter
6	Press <b>UP</b> or <b>AUX</b>	The value on the display will increase or decrease	Set the desired value
7	Press <b>DEF</b>	The display will show the parameter name again	IMPORTANT: parameters not yet saved
8	Repeat steps 4,5,6 and 7 for all parameters required		
9	Press <b>PRG</b> for 5 seconds	The controller will display the temperature read by the probes again	IMPORTANT: only now have all the parameters been updated

For both types of access (type "F" and type "C") there is a timeout (no button on the keypad pressed for 1 min), the procedure is ended without saving the parameters.

**Accessing the parameters divided by functional blocks (allows the user to scroll the list of parameters in blocks)**

Once having accessed the type "F" or "C" parameters (see above tables)

Step	Action	Effect	Meaning
1	Press <b>PRG</b>	The display will show the name of the functional block that the parameter belongs to	Example "CMP" for the compressor parameters, "dEF" for the defrost parameters
2	Press <b>UP</b> or <b>AUX</b>	The display will show the name of the other functional blocks	Example "dEF" for the defrost parameters
3	Press <b>DEF</b>	The display will show the name of the first parameter in the functional block selected	Example "di" for 'dEF'

## Technical specifications

Power supply	Voltage	Power
115-230 V ~, 50/60 Hz		6 VA, 50 mA ~ max.
Insulation guaranteed by the power supply	insulation from very low voltage parts	reinforced - 6 mm in air, 8 mm on surface, 3750 V insulation
Inputs	insulation from relay outputs	basic 3 - mm in air, 4 mm on surface, 1250 V insulation
S1 (probe 1)	NTC & PTC	
S2 (probe 2)	NTC & PTC	
D11	voltage-free contact, contact resistance <10 Ω, closing current 6 mA NTC or NTC & PTC	
S3 (probe 3)		
Type of probe	Maximum distance of probes and digital inputs less than 10 m - <b>Note:</b> in the installation keep power supply and load connections separate from probe, digital input, repeater display and supervisor cables.	
Std. CAREL NTC	10 kΩ at 25 °C, range -50T90 °C meas. error 1 °C in range -50T50 °C 3 °C in range 50T90 °C	
High temperature NTC	50 kΩ at 25 °C, range -40T150 °C meas. error 1.5 °C in range -20T115 °C 4 °C in range outside of -20T115 °C	
Std. CAREL PTC	985 Ω at 25 °C, range -50T150 °C meas. error 2 °C in range -50T50 °C 4 °C in range 50T150 °C	
Outputs	EN60730-1 relay	250 V ~, operating cycles 250 V ~, operating cycles
R1 (*)	12 (2) A N.O./N.C.	100,000
	insulation from very low voltage parts	reinforced: 6 mm in air, 8 mm on surface 3750 V insulation
	insulation between independent relay outputs	basic: 3 mm in air, 4 mm on surface 1250 V insulation
(**) Relays not suitable for fluorescent loads (neon lights, etc.) that use starters (ballasts) with phase shifting capacitors. Fluorescent lamps with electronic controllers or without phase shifting capacitors can be used, depending on the operating limits specified for each type of relay.		
Connections	screw terminals for cables from 0.5 to 2.5 mm <sup>2</sup> max current 12 A	
The correct sizing of the power and connection cables between the instrument and the loads is the installer's responsibility. In max. load and max. operating temp. conditions, the cables used must be suitable for operation at least up to 95 °C		
Case	plastic 34.4 x 76.2 x 79 mm (mounting depth 70.5 mm)	
Assembly	smooth, hard and indeformable panel using side fastening brackets to press in fully drilling template	28.8 ±0.2 x 76.2 ±0.2 mm
Display	digits	3 digit LED
	display	from -99 to 999
	operating status	indicated by graphic icons on the display available
Buzzer		
Operating conditions		-10T60 °C, <90% rH non-condensing
Storage conditions		-20T70 °C, <90% rH non-condensing
Front panel index of protection		assembly on smooth and indeformable panel with IP65 gasket
Environmental pollution		2 (normal situation)
PTI of insulating materials		printed circuits 250, plastic and insulating materials 175
Period of electrical stress across the insulating parts		long
Category of resistance to heat and fire		category D and category B (UL 94-V0)
Class of protection against voltage surges		category II
Type of action/disconnection		1B relay contacts (microswitching)
Construction of the control device		built-in, electronic
Classification according to protection against electric shock		Class II when appropriately integrated
Device designed to be hand-held or integrated into equipment designed to be hand-held		no
Software class and structure		class A
Cleaning the front panel of the instrument		only use neutral detergents and water
Serial interface for CAREL network		external
Repeater display interface		external
Maximum distance between interface and display		10 m
Programming key		available

The IR33+ range fitted with the standard CAREL NTC sensor is compliant with standard EN 13485 on thermometers for measuring the air and product temperature for the transport, storage and distribution of chilled, frozen, deep-frozen/quick-frozen food and ice cream. Designation of the instrument: EN13485, air, S, A, 1, -50T90°C. The standard CAREL NTC sensor is identifiable by the printed laser code on "WP" models, or the code "103AT-11" on "HP" models, both visible on the sensor part.

**Safety standards:** compliant with the relevant European standards.

### Installation warnings:

- the connection cables must guarantee insulation up to 90 °C; and, if necessary, up to 105 °C
- adequately secure the connection cables to the outputs so as to avoid contact with very low voltage componen

## Option codes

IROPZKEY00 parameter programming key, extended memory with 12 V batteries  
IROPZ485S0 RS485 serial card with automatic polarity recognition (+/-)  
IROPZDSP00 Display remote interface

## Display

ir33+ smart comes with a three digit LED display for the temperature and icons to indicate operating status. It can also be connected, via a special interface, to a further display, used for example to read the third probe.

## Reset alarms with manual reset

The alarms with manual reset can be reset by pressing «  » for more than 5 s.

## Manual defrost

As well as automatic defrost, a manual defrost can be activated, if the temperature conditions are right, by pressing «  » for 5 s.

## Continuous cycle

To activate the continuous cycle function press «  » and «  » for more than 3s. During operation in continuous cycle, the compressor will continue running and will stop at the timeout of the cycle or when reaching the minimum temperature (AL = minimum temperature alarm threshold). Continuous cycle setting: parameter 'cc' (continuous cycle duration): 'cc' = 0 never active; parameter 'c6' (alarm bypass after continuous cycle): excludes or delays the low temperature alarm at the end of the continuous cycle.

## Automatic serial address assignment

This is a special procedure that, by using an application installed on a PC, sets and manages the addresses of all the instruments (that include this feature) connected to the CAREL network in a simple way.

The procedure is very simple:

- Using the remote application, start the "Network definition" procedure; the application begins to send a special message (<IADR>) across the CAREL network, containing the network address;
- Press the «  » button on the instrument connected to the network, the instrument recognises the message sent by the remote application, automatically setting the address to the required value and sending a confirmation message to the application, containing the unit code and firmware revision (message 'V'). When the message sent by the remote application is recognised, the instrument displays the message 'Add' for 1 second, followed by the value of the serial address assigned;
- The application, on receiving the confirmation message from the units connected to the network, saves the information received in its database, increases the serial address and resumes sending the message '<IADR>';
- The procedure can be repeated starting from point 2 on another unit connected to the network, until all network addresses are defined.

**Note:** when the operation for assigning an address to an instrument has finished, for reasons of safety, the operation is inhibited for 1 minute on that instrument. Consequently, a different address cannot be re-assigned to the instrument during that time.

## Operating parameters

Complete list of parameters for each configuration

□ frequent parameters 'F'    □ psw protected parameters 'P'    ■ masked parameters (hidden)

Code	Parameter	Description	Configuration			
			bn1	bn2	bn3	bn4
/2	Measurement stability	1...15	4	4	4	4
/3	Probe display response	Temperature display refresh speed (0...15)	0	0	0	0
/4	Virtual probe	Weight % of temp. control probe 2(0...100%)	0	0	0	0
/5	Select °C or °F	0: °C, 1: °F	0	0	0	0
/6	Decimal point	0: enabled, 1: disabled	0	0	0	0
/t1	Reading on remote display	Probe reading displayed 1: Virtual probe 2: Probe 1 3: Probe 2 4: Probe 3 5: Probe 4 6: Probe 5 7: Set point	2	2	2	1
/tE	Display on external terminal	Probe displayed on remote term. 0: remote term. not installed; 1: Virtual probe 2: Probe 1 3: Probe 2 4: Probe 3 5: Probe 4 6: Probe 5	0	0	0	0
/P	Select type of probe	0: NTC -50T90 °C 1: NTC -40T150 °C 2: PTC -50T150 °C	0	0	2	0
/A2	Probe 2 configuration	0: no probe 1: product probe 2: defrost probe 3: condenser probe 4: antifreeze probe	0	0	0	0
/A3	Probe 3 configuration	As for probe 2 (only if A4=0)	0	0	0	0
/c1	Probe 1 calibration or offset	Correction to reading of probe 1 (-20T20 °C)	0	0	0	0
/c2	Probe 2 calibration or offset	Correction to reading of probe 2 (-20T20 °C)	0	0	0	0
/c3	Probe 3 calibration or offset	Correction to reading of probe 3 (-20T20 °C)	0	0	0	0
St	Set point	r1T2 °C	4	2	40	0
r1	Control delta	Value of temperature control differential or hysteresis (0.1T20 °C)	2	2	2	2
r2	Minimum set point	Min. settable value for set point (-50T2 °C)	-30	-30	0	-50
r3	Maximum set point	Max. settable value for set point (r1T200 °C)	30	30	150	60
r3	Operating mode	0: direct thermostat with defrost control (cooling) 1: direct thermostat (cooling) 2: reverse thermostat (heating)	1	0	2	0
r4	Automatic night-time set point variation	Value added to the set point in night-time operation (see 'A4') (-20T20 °C)	3.0	3.0	3.0	3.0
r5	Temperature monitoring probe	0: monitoring disabled 1: monitoring enabled	0	0	0	0
rt	Temperature monitoring interval	Temperature recording hours (0 to 999)	-	-	-	-
rH	Maximum temperature acquired in session		-	-	-	-
rL	Minimum temperature acquired in session		-	-	-	-
c0	Fan start delay (if relay fitted) on power-up	0 to 15 min	0	0	0	0
c1	Minimum time between consecutive compressor starts	0 to 15 min	0	0	0	0
c2	Minimum compressor off time	0 to 15 min	0	0	0	0
c3	Minimum compressor on time	0 to 15 min	0	0	0	0
c4	Duty setting or safety relay	Compressor operating time in the event of control probe fault (fixed off time 15 min) (0 to 100 min)	15	15	0	0
cc	Running time in continuous cycle	Compressor operating time even when the temperature is below the set point (0 to 15 hours)	0	0	0	0
c6	Low temperature alarm bypass time after continuous cycle	0 to 250 hours	2	2	2	2
d0	Type of defrost	0: heater by temperature; 1: hot gas by temperature; 2: heater by time; 3: hot gas by time; 4: heater by time with temperature control	0	2	0	0
d1	Max. time between consecutive defrosts	0 to 250 hours	8	8	8	8
dt1	Evaporator end defrost temperature	-50T200 °C	4	4	4	4
dt2	AUX evaporator end defrost temperature	-50T200 °C	4	4	4	4
dP1	Maximum evaporator defrost duration	1 to 250 min	30	30	30	30
dP2	Maximum aux evaporator defrost duration	1 to 250 min	30	30	30	30
d3	Defrost activation delay	interval between defrost call and effective activation of the relay	0	0	0	0
d4	Defrost at start-up	0: disabled; 1: enabled	0	0	0	0
d5	Defrost delay on start-up or from multifunction input	0 to 250 min	0	0	0	0
d6	Display during defrost	0: temperature alternating with 'dEF' 1: display locked on last temperature before defrost; 2: 'dEF'	1	1	1	1
dd	Dripping time after defrosting	Waiting time before reactivating compressor and fans at the end of defrost (0 to 15 min)	2	0	2	2
d8	Alarm bypass time after defrost and/or door open	See 'A4' (0 to 250 hours)	1	1	1	1
d8d	Door open alarm delay	See 'A4' (0 to 250 hours)	0	0	0	0
d9	Defrost priority over compressor protection times	0: protection times respected; 1: protection times not respected; defrost has higher priority.	0	0	0	0
d/1	Display defrost probe 1		-	-	-	-
d/2	Display defrost probe 2		-	-	-	-
dC	Time base for defrost	0: 'd1' in hours, 'dP1' and 'dP2' in min 1: 'd1' in min, 'dP1' and 'dP2' in seconds	0	0	0	0
d10	Defrost time in "Running time" mode	Compressor operating time with evaporator temperature less than 'd11', after which a defrost is called (0 to 250 hours)	0	0	0	0
d11	Defrost temperature threshold in "Running time" mode	Evaporator temperature below which the compressor must continue operating for the time 'd10' to generate a defrost call (-20T20 °C)	1	1	1	1
d12	Advanced defrosts	0: skip defrost and automatic variation in d1 disabled 1: skip defrost disabled and automatic variation in d1 enabled 2: skip defrost enabled and automatic variation in d1 disabled 3: skip defrost and automatic variation in d1 enabled	0	0	0	0
dn	Nominal defrost duration	1 to 100%	65	65	65	65
dH	Proportional factor for variation in 'd1'	0 to 100%	50	50	50	50

Code	Parameter	Description	Configuration			
			bn1	bn2	bn3	bn4
A0	Alarm and fan differential	0.1T20 °C	2.0	2.0	2.0	2.0
A1	Alarm thresholds (AL, AH) relative to set point (St) or absolute	0: relative; 1: absolute	1	1	1	0
AL	Low temperature alarm threshold	-50T200 °C	-30	-30	0	0
AH	High temperature alarm threshold	-50T200 °C	+30	+30	+150	0
Ad	High and low temperature alarm delay	0 to 250 min	30	30	30	120
A4	Configure function of digital input D11	0: input not active 1: immediate external alarm 2: delayed external alarm (delay A7) 3: enable defrost 4: start defrost from external contact 5: door switch with compr. and evap. fans OFF 6: remote on/off 7: curtain switch 8: low pressure switch input for pump down 9: door switch with fans OFF only 10: direct/reverse operation 11: light sensor 12: AUX output activation 13: door switch with compressor and fans OFF (light not managed) 14: door switch with fans OFF (light not managed)	0	0	0	0
A6	Stop compressor on external alarm	Forced compressor operating time for external alarms (0 to 100 min)	0	0	0	0
A7	Delay time for delayed external alarm	If 'A4'= 2 (0 to 250 min)	0	0	0	0
A8	Enable alarms Ed1 and Ed2	0: signal 'Ed1' and 'Ed2' on display (end defrost due to max. duration dP1/dP2) disabled 1: signal 'Ed1' and 'Ed2' enabled	0	0	0	0
Ac	High condenser temperature alarm	0T200 °C	70	70	70	70
AE	High condensing temperature alarm differential	Differential or hysteresis for activation/deactivation of high condenser temperature pre-alarm (0.1T20 °C)	10	10	10	10
AcD	High condenser temperature alarm delay	0 to 250 min	0	0	0	0
AF	Off time with light sensor	0: sensor in door jamb (the inside light is switched off when sensor detects light and off when it detects darkness) >0: internal sensor (the inside light is switched on when the sensor detects light. After the time AF in seconds the light is switched off for 3 sec. In the event of darkness the inside light remains off, while in the event of light it is switched on again and a cycle starts with a minimum time of 3 sec. (0 to 250 sec.)	0	0	0	0
ALF	Antifreeze alarm threshold	Active if 'A2' or 'A3'= 4 (-50T200 °C)	-5	-5	-5	-5
AdF	Antifreeze alarm delay	0 to 15 min	1	1	1	1
H0	Serial address	0 to 207	1	1	1	1
H2	Lock keypad and/or remote control	0: setting type F parameters and set point disabled 1: all settings are possible 2: setting type F parameters, settings from remote control and set point disabled 3: settings from remote control disabled 4: continuous cycle, defrost, setting type F parameters and ON/OFF disabled 5: continuous cycle, defrost, setting type F parameters, set point and ON/OFF disabled 6: continuous cycle, defrost, setting type F parameters and set point disabled	1	1	1	1
H3	Remote control enable code	0 to 255	0	0	0	0
H4	Terminal buzzer	0: enabled; 1: disabled	0	0	0	0
H6	Terminal keypad lock configuration	1 (bit 0): enable/disable print report 2 (bit 1): enable/disable defrost 4 (bit 2): enable/disable cont. cycle 8 (bit 3): enable/disable mute 16 (bit 4): not associated 32 (bit 5): not associated 64 (bit 6): enable/disable ON/OFF	0	0	0	0
H8	Select output activated by time band	0: time band linked to output configured as light 1: time band linked to AUX (see 'H1' or 'H5')	0	0	0	0
H9	Enable set point variation with time bands	0: set point variation with time band disabled 1: set point variation with time band enabled	0	0	0	0
Hdh	Anti-sweat heater offset	AUX output configured as light or AUX ('H1'= 2, 3, 8 or 9) remains deactivated until control temperature is less than 'St'+ 'Hd' when switching instrument on for the first time or when resetting alarms. (-0T200 °C)	0	0	0	0

**IMPORTANT WARNING:** for the set times to become immediately operational, the instrument needs to be turned off and on again. If this operation is not carried out, timing resumes operation the next time it is used, when the internal timers are reset.

## Alarms and signals: display, buzzer and relay

Below is a table that describes the alarms and control signals, with the corresponding description, status of the buzzer, alarm relay and type of reset.

Code	Description	Icon flashing	Buzzer	Reset
rE	Virtual control probe fault		ON	AUTO
E0	Room probe S1 fault		OFF	AUTO
E1	Defrost probe S2 fault		OFF	AUTO
E2	Probe S3 fault		OFF	AUTO
" "	Probe not enabled	-	OFF	AUTO
LO	low temperature alarm		ON	AUTO
HI	high temperature alarm		ON	AUTO
IA	immediate alarm from external contact		ON	AUTO
dA	delayed alarm from external contact		ON	AUTO
dEF	defrost running	 always on	OFF	AUTO
Ed1	defrost on evaporator 1 ended by timeout	-	OFF	AUTO
Ed2	defrost on evaporator 2 ended by timeout	-	OFF	AUTO
Pd	maximum pump down time alarm		ON	AUTO/MAN
LP	low pressure alarm		ON	AUTO/MAN
AtS	autostart in pump down		ON	AUTO/MAN
cht	high condenser temperature pre-alarm	-	OFF	AUTO/MAN
CHT	high condenser temperature alarm		ON	MAN
EE	Unit parameter EEPROM error		OFF	AUTO
EF	Operating parameter EEPROM error		OFF	AUTO
Add	Automatic address assignment procedure in progress	-	-	-
ccb	Start continuous cycle call	-	-	-
cCE	End continuous cycle call	-	-	-
dFb	Start defrost call	-	-	-
dFE	End defrost call	-	-	-
On	Switched ON	-	-	-
OFF	Switched OFF	-	-	-
rES	Reset alarms with MAN reset, reset temp. monitor.	-	-	-
n1-n6	Alarm on unit 1-6 in the network		ON	AUTO
dNL	Download procedure in progress	-	-	-
d1-d6	Download procedure with errors on unit 1-6		OFF	-